


# TINY485

## RS232 TO RS485 CONVERTER

*Set RTS active when transmit,  
otherwise make it inactive.*

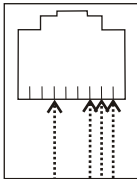

PIN 6, +9V~12V  
100mA

.....PIN 1, D-

.....PIN 2, D+

Power  
Supply

PIN 3, GND

Wiring Diagram

Rear View